

# LOCKWOOD COMMERCIAL DOOR FURNITURE MOUNTING INSTRUCTIONS



1360 & 1370











ASSA ABLOY

WIOUNTING INSTRUCTIONS

1220 Series / 3220 Series

1420 Series

1360 Series

1370 Series

HAND OF FURNITURE ACCORDING TO ENGLISH PRACTICE

DOOR OPENING IN

LH Lever INSIDE RH Lever RIGHT HAND

LEFT HAND

LEFT HAND

LEFT HAND

1220 Series / 3220 Series

1420 Series

1420 Series

1360 Series

 
1370 Series

1370 Series

For handing of fundaments of fundame


# HANDING OF FURNITURE

### Verify correct handing of furniture on the door required. Lever should rotate downwards.






**INSTALLATION OF FURNITURE** 

 

் ப் LH Lever

 - Remove lock from mortice.
- Place template in correct alignment, and mark hole centres accurately and drill holes required.
- If required cut screws to length as indicated, deburr end of cut screw. Note: Do not cut with pliers or sidecutters as this is likely to cause thread damage upon assembly.



# LOCKS WITH TURN KNOBS

- Mark and cut connecting bar as shown.
- Turn knob to be in the vertical position when unlocked.

# FINAL ASSSEMBLY

### For Round Rose Furniture

 
- Insert fixing screws through inner retainer rose.
- Mount furniture on door through lock or latch.

1220, 3220 & 1420

- Secure furniture by tightening fixing screws.
- Check screw length is correct. For 1220, 3220 & 1420 ensure screw does NOT protrude through outer retainer rose.

# For Square Rose Trim Furniture (1420 only)

 If required fix grub screw to outer square rose with allen key supplied.



## For Captive Rose Furniture (1220, 3220 & 1420 Only)

- For Captive Rose furniture levers 44, 55, H20 & S55, loosen and undo outer rose trim.
- Rotate lever 45° and position rose trim to allow clear access to fixing screw holes.
- Insert fixing screws.

